


CO200X Operations Guide

This manual outlines the operating procedures for all CO200X series products

1. Power Up UTC Time / Default Screen

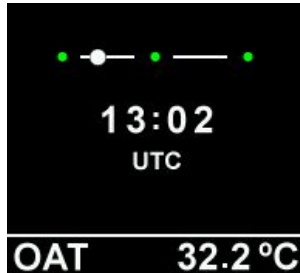

Displays UTC time, seconds on the minute progress bar and the Outside Air Temperature at the bottom of the instrument.

Press the top button to move to the next display screen (#2).

2. Local Time



The local time is displayed based upon the selected UTC offset.


Press the top button for the next screen (#3), OR



To change or set the UTC offset, press the bottom button and follow the onscreen instructions to set the offset. Use the bottom button to navigate and the top button to set.

Select [DONE] to return to the local time display.

3. Chronograph / Down Counter

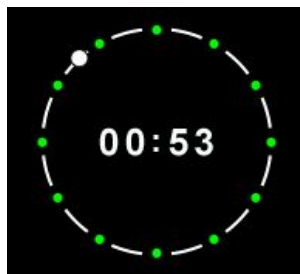

A value will be displayed on the chronograph display and the seconds indicator will move at a one second rate.

To set the down counter value, press the bottom button and follow the onscreen instructions.

CO200X Operations Guide


Once the desired value has been set, select the [START] option at the desired start point of the timer.

The chronograph will continue to run even when the user navigates away from the screen. When 10 seconds remain on the down timer, the timer will take control of the current instrument activity and return the instrument to the chronograph screen for the final 10 seconds of the count.

NOTE: The Dimmer Control menu is not available when the down timer is running.

Press the top button to move to the next display screen (#4).

4. Flight Time Display / Interval Timer

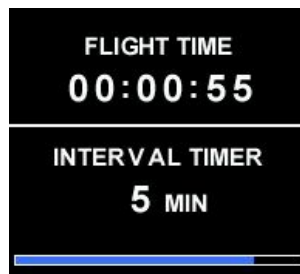


Displays the current flight time and the current value of the interval timer.

This screen will timeout after the blue progress bar expires and will return to the default screen.

To return to the default screen press the top button or wait for the progress timeout.

To restart the flight time or set the interval timer, press the bottom button.

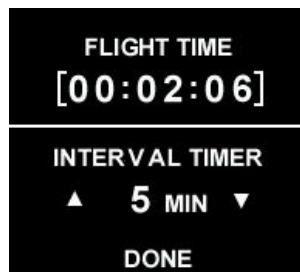

Then use the bottom button to navigate to the function of choice.

To reset the flight timer, select the time value field and press the top button. The text [RESET] will appear beneath the FLIGHT TIME header.

Press the top button again to reset the timer and restart.

To set the interval timer, select the appropriate interval time (minutes) by navigating to the increment or decrement selectors with the bottom button. Then press the top button to change the values.

Once the correct value has been selected, navigate to the [DONE] option with the bottom button and select with the top button.



At the time of the interval period, the interval timer notification will be displayed on the bottom right in a green box. The value in the box is the minute value of the interval.

The timer will flash for 20 seconds before continuing to wait for the next period.

CO200X Operations Guide

5. Other Options

To display the instrument serial number and core information press and hold the bottom button when in the default screen.

WARNING

All flight operations are to be performed in accordance with the specific instructions pertaining to your aircraft, including those provided by the engine manufacturer. The CO200X series instruments are only parameter reporting devices which can assist in flight management when used in conjunction with these instructions.

All CO200X products are certified as primary replacements, within the limits as described above, or for secondary use as desired.